

# opticon

## IS R Fieldscopes


User Instructions and 10 Year Guarantee



**Models**  
**IS 60 R**  
**IS 60 R/45**  
**IS 70 R**  
**IS 70 R/45**

# Main Features, Specifications & Eyepieces

---

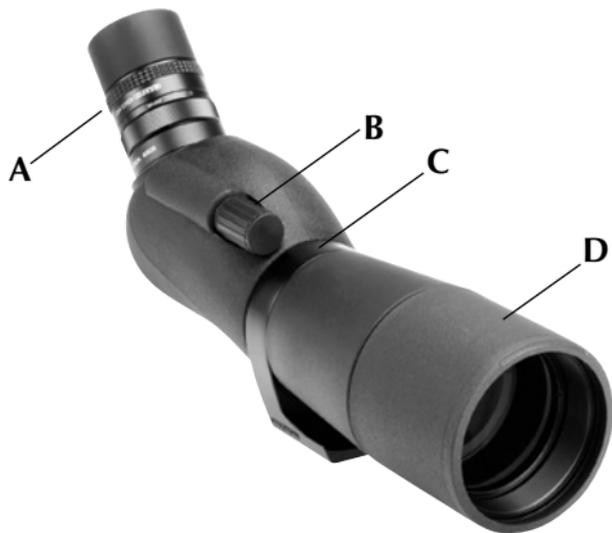

- A Interchangeable eyepiece (not included).
- B Focus wheel.
- C Tripod sleeve with +/- 90° rotation and large footprint tripod adapter socket with 1/4" thread.
- D Retractable lens hood.

Specifications	60	60/45	70	70/45
Product Code	41180	41181	40996	40997
OG Dia (mm)	60	60	70	70
Close Focus (m)	7	7	10	9
Length (mm)	255	270	295	300
Weight (g)	852	864	1096	1123

# Eyepieces

---

Eyepieces	• SDLv2	• HDF				• HR			• IS
Product Code	40936S	40810S	40831S	40861S	40862S	40930S	40931S	41145S	40918S
Magnification 60	15-45x	17xWW	23xWW	72x	15-45x	20xWA	25xWA	16-48x	18-54x
Magnification 70	16-48x	18xWW	25xWW	80x	16-48x	21xWA	27xWA	18-54x	20-60x
Adapter required	40927S	40925S	40927S	40925S	40927S	40925S	40925S	40927S	N/A
Eye Relief (mm)	20-18	22	16	16	22-17	18	17	20-16	34-18

## Getting Started

---

Your IS R fieldscope will bring a new dimension to long range observation bringing far away subjects into clear and sharp focus.

1. To minimise image shake caused by the high magnification, the instrument should be supported using a suitable tripod or mount.
2. Connect the fieldscope to the tripod or mount using the tripod socket located on the underside of the tripod sleeve.
3. Make sure the eyepiece is attached securely. The retractable rubber eyecup should be used in the down position when wearing glasses. This ensures the maximum available field of view is obtained. Be sure to return the eyecup to the up position if you or anybody else wants to view without glasses.
4. To focus, locate the subject in the centre of the field of view and rotate the focus wheel until the subject comes into sharp focus.
5. If you are using a variable magnification or zoom eyepiece set the magnification to minimum when trying to locate your subject, only zooming once the subject is centred. With some eyepieces a small amount of refocusing may be required as the zoom is adjusted.
6. The retractable lens hood should be extended when viewing in bright sunlight.

**WARNING.** Never under any circumstances use a fieldscope to view the sun. Doing so will cause serious damage to your eyes.

## Waterproof Cases

---

### Stay-on-the-Scope Waterproof in Black

Water resistant multi-layer padded cases individually designed to fit each model. Protects instrument while fitted to a tripod and in use. Includes removable end caps and adjustable carry strap.



## Care & Cleaning

---

To clean outer glass surface of the eyepiece and objective lens, gently remove excess dirt and dust using a compressed air device or blower brush. **Caution.** Hard and persistent rubbing of dirty surfaces can cause abrasive scratches on the surface of the glass which may distort viewing. Breathe on exposed glass surface and then wipe with an optical cleaning cloth (code 30277) in a circular motion until the surface is clean again. Do not attempt to dismantle the instrument as this will invalidate the guarantee.

Whenever possible store in a stable dry atmosphere away from moisture. For extra protection, use the gift box or one of the optional cases available.

# Telephotography

**Telephotography using SLR cameras (digital or film) and compact system cameras.** In this system the camera lens is substituted for the fieldscope + telephotoadapter or fieldscope + eyepiece + photoadapter. To convert IS R models into a telephoto lens (IS 60 R 700mm<sup>1</sup>/f.11.7, IS 70 R 750mm<sup>1</sup>/f.10.7) you will need a 40215 telephotoadapter with 40927S close focus adapter. Alternatively connect a suitable push fit photoadapter to your viewing eyepiece.<sup>2</sup> A T-mount is required to connect the assembly to the camera body.

Notes. Focusing is facilitated on the fieldscope. Camera may need to be operated in manual mode with shutter locks disengaged where necessary. The high magnification to aperture ratios result in slower shutter speeds compared with conventional telephoto lenses so choose an ISO setting of 400. For 35mm SLRs 400 ASA film is recommended. If possible use a cable release or remote control to reduce camera shake when operating the shutter.


<sup>1</sup> This is an approximate figure based on 35mm SLR cameras. DSLR/compact system cameras use different sized image sensors compared to 35mm so an equivalent telephoto conversion figure must be calculated separately.

<sup>2</sup> For information on push fit photoadapters visit our Digiscoping & Telephotography pages at [www.opticron.co.uk](http://www.opticron.co.uk)

## Digiscoping with digital compact cameras, camcorders and mobile phones

Shooting high magnification photos and video through your fieldscope is possible if you have a suitable camera, camcorder or mobile phone. To find out how suitable or not your device is for digiscoping, position it up to the viewing eyepiece and see if an image appears on the screen. You may have to position the unit a few mm away from the eye lens of the eyepiece and increase the zoom to get a full frame image.

To find out more about bespoke digiscoping kits and universal mounts and brackets visit the Digiscoping & Telephotography pages at [www.opticron.co.uk](http://www.opticron.co.uk) or contact Sales on +44 (0)1582 726522.

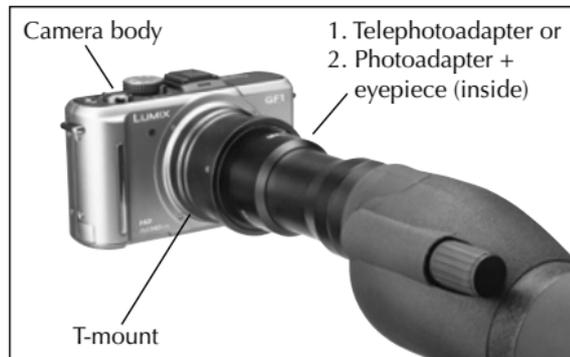

# Guarantee

---

Please keep this Guarantee Card in a safe place

Model:.....

Serial No: ..... Purchase Date:.....

Dealer: .....

Opticon IS R fieldscopes are of a very high quality both in their performance and construction.

We guarantee some parts in these instruments for up to 10 years under the following conditions:

- (i) In the case of defects attributable to faulty processing or materials, we will assume responsibility for the labour and material costs during the first 5 years after purchase. We reserve the right to decide whether defective parts should be repaired or replaced.
- (ii) During the next 5 years we will assume responsibility for material costs only, charging corresponding labour costs.
- (iii) We will accept no liability for damage caused by incorrect use or for any repairs or actions which have been carried out outside our firm.
- (iv) Rubberised coverings are excluded from the guarantee.

This guarantee is in addition and does not affect your statutory rights.

# Registration

---

If you would like to register your purchase with us please visit [www.opticron.co.uk](http://www.opticron.co.uk) and complete the online Product Registration Form.

Alternatively please telephone us during normal working hours on the numbers given. We will need the product name and serial number (if applicable), purchase date and outlet, your name and postcode.

Registration is voluntary and failure to register will not diminish your rights under the guarantee.

## **Privacy**

Opticron takes your privacy seriously and we do not share personal information with other companies.

**opticon**

**Address:** Opticon, Unit 21, Titan Court, Laporte Way, Luton, Bedfordshire, LU4 8EF, UK

**Phone:** +44 (0)1582 726522 **Fax:** +44 (0)1582 723559 **Email:** [sales@opticon.co.uk](mailto:sales@opticon.co.uk)